

# USB Flash Drive Installation Guide

For more information on our products, visit our Web site at:

- [www.crucial.com](http://www.crucial.com)
- [www.crucial.com/eu](http://www.crucial.com/eu)
- [www.crucial.com/uk](http://www.crucial.com/uk)
- [www.crucial.com/asia](http://www.crucial.com/asia)

## English

### Microsoft® Windows® XP® or greater users:

Your system supports USB. You do not need to install a driver. Proceed as follows:

1. Remove the protective cap\* from the Gizmo!™ drive.
2. Connect the Gizmo! drive to any USB port on your computer, either directly to your computer or by using a USB extension cable. If your drive does not slide into the port easily, do not try to force it — it will not function if you install it backwards. Turn the drive 180° and try inserting it again.
3. Open **My Computer** or **Windows Explorer** and locate the Gizmo! drive icon. (The drive letter assigned to the Gizmo! drive depends on the configuration of your computer.)
4. The Gizmo! drive is now ready to use just like any other drive on your computer. Transfer files between the Gizmo! drive, your computer's hard drive, or other removable media.
5. Before removing the Gizmo! drive, make sure that the drive is not transferring data. (If the **Remove Hardware** icon is present in the taskbar notification area, click it to stop the Gizmo! drive.) You can now safely remove the Gizmo! drive.

**CAUTION:** The indicator light\* flashes rapidly during data transfer; do not remove the drive during data transfer, or data loss may occur.

\*Does not apply to Gizmo! Jr.

### Mac® OS 10.3.9 or greater users:

Your system supports USB. You do not need to install a driver. Proceed as follows:

1. Remove the protective cap\* from the Gizmo! drive.
2. Connect the Gizmo! drive to any USB port on your computer, either directly to your computer or by using a USB extension cable.
3. The Gizmo! drive icon appears on the desktop.
4. The Gizmo! drive is ready to use just like any other removable device connected to your computer. To start using it, double-click the Gizmo! icon on the desktop. Transfer files between the Gizmo! drive, your computer's hard drive, or other removable media.
5. To remove the Gizmo! drive, drag the icon to the trash can. You can now safely remove the Gizmo! drive.

**CAUTION:** The indicator light\* flashes rapidly during data transfer; do not remove the drive during data transfer, or data loss may occur.

\*Does not apply to Gizmo! Jr.

### Technical support and customer service

For technical support in North and South America, e-mail [crucial.support@micron.com](mailto:crucial.support@micron.com) or call 800-336-8916 (U.S. and Canada only) or 208-363-5790. For customer service or returns, call 800-336-8915 (U.S. and Canada only) or 208-363-5790, or send an e-mail to [crucial.service@micron.com](mailto:crucial.service@micron.com).

For technical support in Europe, e-mail [crucialeusupport@micron.com](mailto:crucialeusupport@micron.com) or call 0800 013 0330 (UK only) or +44 (0) 1355 586100 (international). For customer service or returns, call 0800 013 0330 (UK only) or +44 (0) 1355 586100 (international) or send an e-mail to [crucialeusupport@micron.com](mailto:crucialeusupport@micron.com).

For technical support in Asia and Australia/New Zealand, e-mail [asiacrucialsupport@micron.com](mailto:asiacrucialsupport@micron.com) or call (65) 6278-2425. For customer service or returns, call (65) 6278-2425 or send an e-mail to [asiacrucialservice@micron.com](mailto:asiacrucialservice@micron.com).

