



# Flash Memory Card Installation Guide

For more information on our products, visit our Web site at:

- [www.crucial.com](http://www.crucial.com)
- [www.crucial.com/uk](http://www.crucial.com/uk)
- [www.crucial.com/eu](http://www.crucial.com/eu)
- [www.crucial.com/asia](http://www.crucial.com/asia)

## English

This guide provides general information about installing your flash card in your digital device, but your device may have special requirements. Thoroughly read the information that came with your device before installing your flash memory card.

**Note:** Some digital media devices may require you to format your flash memory card prior to use in that device. Always check the user manual that came with your device for formatting instructions.

### Installation:

1. Crucial recommends that you always hold your card by the edges to ensure that you are protecting against damage and data loss.
2. Slide your card into the appropriate slot on your device.
3. If your card does not slide into the slot easily, do not try to force it — it will not fit if you install it backwards. Turn the card around 180° and try inserting it again.

### Special considerations:

- Keep your card away from direct sunlight, moisture, and magnetic fields.
- Change or re-charge the batteries in your device regularly. Using your card in a device with a low battery may lead to data corruption.

**Caution:** While it usually is not necessary to turn off the power before you remove your card, you should **never remove your card while the device is in the process of writing or reading data** to the card. Doing so could damage your card or cause the corruption of your data.

### Technical support and customer service

**For technical support in North and South America**, e-mail [crucial.support@micron.com](mailto:crucial.support@micron.com) or call 800-336-8916 (U.S. and Canada only) or 208-363-5790. For customer service or returns, call 800-336-8915 (U.S. and Canada only) or 208-363-5790, or send an e-mail to [crucial.service@micron.com](mailto:crucial.service@micron.com).

**For technical support in Europe**, e-mail [crucialeusupport@micron.com](mailto:crucialeusupport@micron.com) or call 0800 013 0330 (UK only) or +44 (0) 1355 586100 (international). For customer service or returns, call 0800 013 0330 (UK only) or +44 (0) 1355 586100 (international) or send an e-mail to [crucialeusupport@micron.com](mailto:crucialeusupport@micron.com).

**For technical support in Asia and Australia/New Zealand**, e-mail [asiacrucialsupport@micron.com](mailto:asiacrucialsupport@micron.com) or call (65) 6278-2425. For customer service or returns, call (65)6278-2425 or send an e-mail to [asiacrucialservice@micron.com](mailto:asiacrucialservice@micron.com).

