

Electrostatic Discharge (ESD) Information

Electrostatic discharge, or the release of static electricity, can damage any of the electronic components of a computer such as the disk drive, system board, processor, memory, add-in boards, etc. ESD occurs when you touch an object that conducts electricity and is at a different electrical potential than you are. To protect your memory module from ESD, keep the module in its original ESD-protective package. Do not remove from the protective packaging until you are ready to install it.

Equipment

- Memory modules
- Nonmagnetic tip screwdriver (for removing cover only)
- Your computer's manual


Rules of Thumb for Memory Module Installation

1. Make sure that you are working in a static safe environment. Remove any plastic bags or papers from your work space, and make sure to keep your computer plugged in but with the power turned off. Keeping your PC plugged in will keep the case grounded, thus reducing the chance of damaging the module or system from ESD. Touch an unpainted metal part of your case before touching your new modules or any other components in your system.
2. Refer to your computer's manual when removing the computer's cover.
3. Ground yourself by touching any of the unpainted metal surfaces on your computer's frame. (This will remove any static electricity from your body or clothing)
4. Locate your computer's memory expansion slots (consult your owners manual). Do not use any tools in the removal or installation of memory modules.
5. Insert your memory upgrade according to the illustrations in this guide. Note how the modules are keyed to the socket. This insures that the module will be aligned correctly.
6. Once the module(s) have been installed, the computer's cover can be replaced. The installation is now complete.

Note: When restarting your computer you may get a message prompting you to update the configuration settings. Refer to your computer's manual on how to accomplish this step. If the instructions provided here do not appear to cover your system, please consult your owners manual. If you are still unsure, please call our Technical Support at (65) 6278-2425 for assistance.


SIMM Installation

When installing SIMMs, most manufacturers require the module to be inserted at a 45 degree angle, then "snapped" forward to the correct position. Most Pentium systems require matched pairs of modules.

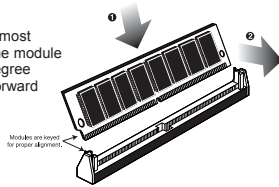


DIMM Installation

Unlike SIMM installation, DIMMs may be "snapped" directly into the socket. Note: Certain DIMM sockets have minor physical differences. If your module doesn't seem to fit, please do not force it into the socket. Instead, contact our customer service department.

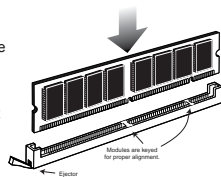

SODIMM Installation

Insert module at an angle and "snap" down into position. Some laptops require a single SODIMM module while others require matched pairs.

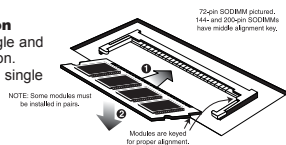

Helpful Hints and Troubleshooting Tips

1. If you receive an error message or hear a series of beeps, your system may not be recognizing the new memory. Remove and reinstall the modules to make sure they are seated securely in the sockets.
2. Make sure that your new memory is the same type as your old memory (i.e. FPM/EDO/SDRAM, parity/non-parity/ECC, buffered/unbuffered). Using EDO or SDRAM in a system that does not support it will not work, often resulting in a blank screen and no POST (power on self test), or a BIOS/CMOS setup error.
3. Fill your slots starting with the largest density (put the largest module in bank 0, and the second largest in bank 1, and so on). If this doesn't work, try reversing the procedure.
4. If your DIMM module will not fit into the slot it may be because you have an incompatible module. The notches are different for 3.3V, 5V, buffered, and unbuffered DIMM modules.
5. If your system won't boot up with only the original modules, check all of your connections inside your PC. It is easy to bump a cable and pull it out of its connector, disabling your hard drive or CD-ROM.
6. If you are using MS-DOS version 6.22 or earlier and are getting memory errors, consider running Memmaker to re-configure your memory settings.
7. If you get a memory mismatch message, follow the prompts to enter setup, then select save and exit. (This is not an error - some systems must do this to update their CMOS settings.)
8. If your system is only recognizing half of the new module's memory please call Crucial Customer Service. Please be prepared to supply the type of module(s) (EDO, FPM, Sync, etc.) and the number of chips on the module(s).

Service Contacts

Sales/Service(65) 6278-2425
.....AsiaCrucialService@micron.com
.....AsiaCrucialSales@micron.com
Websitehttp://www.crucial.com/asia

Warranty Service and Return Information

Please contact the place of purchase for return procedures. If customer purchased product(s) directly from Crucial Technology Asia, then customer shall return the product(s) to Crucial Technology Asia pursuant to the following terms. Customer must obtain a Return Material Authorization ("RMA") number by calling customer service at (65) 6278-2425. Returned products should be shipped to the following address:

Crucial Technology Asia
Attn: RMA Dept - RMA# _____
990 Bendemeer Road
Singapore 339942

Customer shall return the products to Crucial Technology Asia in the original packaging and enveloped in the original antistatic bags. Crucial Technology Asia will not be responsible for damaged parts if customer does not follow this process. Please retain shipping information, including tracking numbers, until your account has been credited by Crucial Technology Asia or replacement product is received. If Crucial Technology Asia determines that failure of the product(s) was not a result of a defect in materials or workmanship, Crucial Technology Asia reserves the right to charge customer for parts and labor at Crucial Technology Asia's then current labor rate or charge customer a 20% restocking fee. Crucial Technology Asia will advise customer prior to assessing these charges.

Terms and Conditions

If you do not accept the terms and conditions set forth herein, you must immediately return the product(s) to Crucial Technology Asia (or the place of purchase if not purchased directly from Crucial Technology Asia) to receive a full refund of the purchase price (but not original or return shipping and handling charges). You must call Crucial Technology Asia Customer Service at (65) 6278-2425 for return procedures. Claims against Crucial Technology Asia for shortages shall be deemed waived if not made within three (3) business days after receipt of the shipment. Customer agrees to pay interest at the lesser of eighteen percent (18%) per year or the maximum amount allowed by law on all past due amounts, together with costs of collection, including cost of litigation and reasonable attorney's fees.

Terms of Limited Warranty

Crucial Technology Asia warrants to the original customer purchasing any products directly from Crucial Technology Asia only that all such products sold will be free from defects in materials and workmanship affecting form, fit and function. Any claim alleging that any product fails to conform to the foregoing warranty may be made only by the original customer who purchased such product and only while such customer owns such product. Crucial Technology Asia, at its option, will repair, replace, or provide a credit or refund of either the original purchase price or fair market value, whichever is lower, for any part covered by the Lifetime Limited Warranty that is determined by Crucial Technology Asia to be defective. Crucial Technology Asia reserves the right to substitute functionally equivalent new or serviceable used parts. The Lifetime Limited Warranty covers only defects arising under normal use and does not include malfunctions or failures resulting from misuse, abuse, neglect, alteration, problems with electrical power, usage not in accordance with product instructions, acts of nature or improper installation or repairs made by anyone other than Crucial Technology Asia or a Crucial Technology Asia-authorized third-party service provider. If Crucial Technology Asia determines that failure of the product(s) was not a result of a defect in materials or workmanship, Crucial Technology Asia reserves the right to charge customer for parts and labor at Crucial Technology Asia's then current labor rate or a 20% stocking fee, whichever is greater. Crucial Technology Asia will advise customer prior to assessing these charges or other charges associated with return of products. Customer must call Crucial Technology Asia Customer Service at (65) 6278-2425 for return procedures.

Limitations

THE PRODUCTS ARE NOT AUTHORIZED FOR USE AS CRITICAL COMPONENTS IN LIFE SUPPORT DEVICES OR SYSTEMS. EXCEPT AS SET FORTH HEREIN, CRUCIAL TECHNOLOGY ASIA MAKES NO WARRANTIES, EXPRESSED OR IMPLIED, AND CRUCIAL TECHNOLOGY ASIA DISCLAIMS AND NEGATES ALL OTHER WARRANTIES, INCLUDING WITHOUT LIMITATION, IMPLIED WARRANTIES OF MERCHANTABILITY, FITNESS FOR A PARTICULAR PURPOSE, CONFORMITY TO MODELS OR SAMPLES, OR ANY WARRANTIES OR INDEMNITIES AGAINST INTELLECTUAL PROPERTY INFRINGEMENT. SOME STATES DO NOT ALLOW LIMITATIONS ON IMPLIED WARRANTIES. SO THESE LIMITATIONS MAY NOT APPLY TO YOU. IN NO EVENT SHALL CRUCIAL TECHNOLOGY ASIA BE LIABLE FOR ANY INDIRECT, SPECIAL, INCIDENTAL OR CONSEQUENTIAL DAMAGES. ALL DISPUTES ARISING OUT OF OR RELATED TO THE LIMITED WARRANTIES SET FORTH HEREIN (CUSTOMER DISPUTES) SHALL BE GOVERNED BY THE LAWS OF SINGAPORE. CLAIMS AGAINST CRUCIAL TECHNOLOGY ASIA FOR SHORTAGES SHALL BE DEEMED WAIVED IF NOT MADE WITHIN THREE (3) BUSINESS DAYS AFTER RECEIPT OF THE SHIPMENT.

For technical support, call Crucial Technology Asia's Customer Service telephone number at (65) 6278-2425, or e-mail Crucial Technology Asia at AsiaCrucialSupport@micron.com. Crucial Technology Asia is a division of Micron Semiconductor Asia Pte Ltd. Rev. 4_04



Memory Module Installation Instructions